
Alcatel-Lucent 8068/8038/8028/8039/8029 Premium DeskPhone

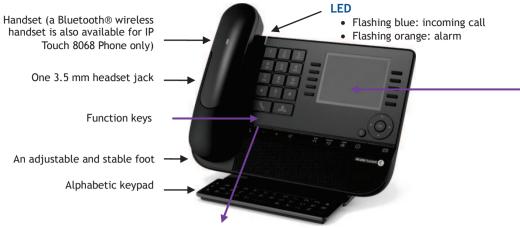



Function keys Mute and intercom.		· ·
Handsfree, handset	or headset volume. Adjust contrast	
Audio services (hand	dsfree, handset or headset).	
with the key is these keys. • Pre-programme	keys (F1 and F2 keys): Lit when the function associated activated. A service or a direct call can be associated to ed function keys are disabled in "safe " mode. keys are line keys.	F
Redial key: to acces	s the 'Redial' feature.	
Guide key: Used to program key of the	obtain information on functions of the "menu" page and to "perso" page.	
5 5 ,	cess various mail services. This key is lit when you have email, text message or callback request.	
Handsfree key To ma	ake or answer a call without lifting the receiver.	
END key To terminat	te a call.	- *
Bluetooth® wireles	ss handset (8068 Premium DeskPhone)	
3 Bluetooth	Off-hook/On-hook	Ð
	Volume/Mute: • Short successive presses to change the handset volume level (3 levels) • Long press to ensure your caller no longer hears you	•

Welcome screens



Contains several lines and pages providing information on calls and the features that can be accessed by pressing the keys associated to the labels on the display (10 keys for 8068/38/39 phones and 6 keys for the 8028/29 phones).

- Menu page: Contains all functions and applications accessible via the keys associated with the words on the screen.
- Perso page: Contains call line keys (allowing supervision of calls) and programmable call keys.
- Info page: Contains information on the telephone and the status of its functions: name, telephone number, number of messages, activation of transfer function, appointment reminder, etc.
- Transfer icon: Pressing the key next to this icon allows you to program or change the transfer function.

Navigation



- OK key: Used to validate your choices and options while programming or configuring
- Left-right navigator: Used to move from one page to another and display information about current calls (call in progress, calls on hold, incoming call).
- Up-down navigator: Used to scroll through the content of a



• Use this key to go back to the previous step

Add-on module

• Use this key to go back to the homepage (long press)


Status	icons /	Call	icons

Alphabetic keypad

50	Headset connected	Š	Incoming call icon
	Telephone locked	200 200 200 200 200 200 200 200 200 200	Call in progress icon
	Appointment programmed		Call holding icon


Cursor moving keys (left, right, up and down).	11 15
Caps lock: to write text in	A

The 8028/8029 Premium Deskphone has 4 programmable keys with LED and paper labels. Phone capabilities can be extended with Premium Add-on 10- and 40-key modules or Premium Smart display 14-key module.

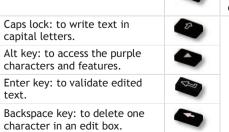



 All features are described for OmniPCX Office and OmniPCX Enterprise Systems. If a feature works differently on each system it is described twice. . The label displayed on the phone depends on the type of phone. This guide provides the labels for 8068/38/39 phones plus 8028/29 phone labels in parentheses (if different).



Call

• Dial the number directly or dial the number after pressing a line key (an off-hook key phone or Bluetooth handset, hands-free key)

Call by name (Company directory)

- RCE Enter the first letters of contact's name and follow the on-screen instructions.
- OTCT Enter the name, contact's surname/name or initials and follow the on-screen instructions.

Answer a call

New call

conversation

• Take the handset off the hook, use an off-hook key (phone or Bluetooth handset), use hands-free key, or press the key next to the incoming call icon

-	
Ignore call / End the call	*
 Redial Long press to access the list of the last 10 dialed numbers Short press to call the last dialed number 	
Make a call-back request to a busy number • Callback	
Placing a call on hold (hold) • Hold	0
Sending DTMF signals • ÚMFcode (RCE), Send DTMF (OTCT) • Send numbers	
Mute	R.
 Interphony The phone automatically answers the call. Before the line is taken, you hear a succession of specific beeps. 	() m

Making a second call during a conversation

• Press the key associated with the incoming call

Answering a second call during a

Switching between calls (Broker call) • Press the key associated with the call on hold	
To cancel your second call and recover the first: • You automatically recover the first call	*
 Transferring a call You are in conversation with one caller Call a second contact Transfer the call 	
Conference	
Make calls via your programmed call keys • Press the desired programmed call key	Perso
 Modify the programmed key Press the programmed key to be modified Follow the on-screen instructions 	Perso
 Erase a programmed key Settings > Keys (RCE) Settings > Phone > Key program (OTCT) Select the key to be erased Follow the on-screen instructions 	Menu
 Customizing your voice greeting Settings Mailbox You can listen to the greeting, customize the greeting and set the default greeting 	Menu
Consulting your voice mailbox	\boxtimes
 Diverting calls to your voice mailbox Press the key associated to the forward icon Immediate »VM ress the key associated with the type of call forward required 	5
 Cancel forward Press the key associated to the forward icon Cancelfwd. 	5

Do not disturb Press the key associated to the forward icon DoNotDisturb (DND)	5
Send text messages • Message • SendTxtMsg • Enter the destination number • Select the type of message to send (fixed Msg, New Msg,)	
Read text messages • Message • ReadTxtMsg	
Information about the phone	Info
Lock/unlock the phone • Lock	Menu
Adjust audio volume	
Select the language of your choice Settings > Options > Language (RCE) Settings > Phone > Language (OTCT)	Menu
 Choose the tune Settings > Phone > Ringing Adjust the ring via the following menus: Melody, Silent, Beeps, Volume, etc. 	Menu
Adjusting screen contrast • Settings > Phone: > Contrast	Menu
Modify the password for your phone set • Settings > Options > Password (RCE) • Settings > Phone > Password (OTCT)	Menu
Homepage • Settings > Options > Homepage (RCE) • Settings > Phone > Homepage (OTCT) • Select the default page	Menu